



For The ON-THE-GO Pet™

INSTRUCTION MANUAL SPECIAL EDITION

Pet Stroller

PG8250



To see our full line of products, visit us online at: www.petgearinc.com

CUSTOMER SERVICE HELP DESK

customerservice@petgearinc.com

Toll-Free 877-752-9123 - Eastern Standard Time 8am-3pm, Monday through Friday

⚠ WARNING!


FOR PETS ONLY.

Not intended to be used as a restraining device for aggressive or dangerous animals that dig, chew or paw aggressively. Do not leave your pet unattended. **PET GEAR** is not liable for any damage caused by aggressive, destructive, immature or untrained animals. Do not use near an open or exposed flame. Failure to follow these warnings and the instructions could result in serious injury or death.


- Do not carry additional bags, goods, or accessories in or on stroller except as recommended in the manufacturer's instructions.
- Recommended use of an approved safety restraint correctly fitted and adjusted.
- Do not leave pet unsupervised in stroller.
- Before making adjustments to stroller ensure that pet's body is clear of any moving parts.
- This stroller is designed for one pet only.
- Do not hang bags from handles as this may cause the product to become unstable.
- Do not use on escalator or stairs; fold stroller and carry.
- Put on brake whenever you park the stroller.
- Ensure stroller is completely erected and check that all locks are engaged before placing pet in stroller.
- Do not overload as stroller may become unstable; maximum weight of pet using this stroller not to exceed 45 lbs.
- Any goods carried in the basket not to exceed 6 lbs.

PARTS LIST


Check that you have all the parts shown BEFORE assembling your product.
If any parts are missing, call Customer Service. No tools required.

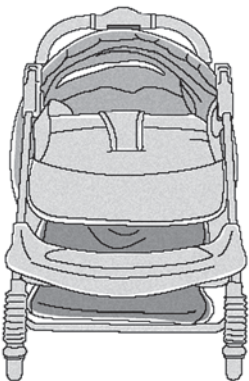

Stroller Frame

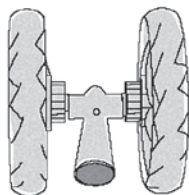


Front Wheel Assembly

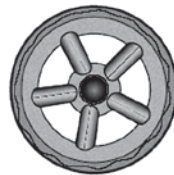

Rear Wheels (2)



Rear Axel Assembly



Back Tray



Washers (2)



Cotter Pins (2)



Hub Cap

OPENING THE STROLLER



Step 1. Release locking latch.



Step 2. Unfold as shown. Make sure both locks snap into place.

TO ASSEMBLE FRONT WHEELS

Step 1. Turn stroller over as shown.

Step 2. Push wheel assembly onto stroller leg until it snaps into place.



Note Direction
of Arrow

NOTE: To remove, squeeze tab and pull wheel off.



ASSEMBLING REAR WHEELS TO AXLE

Step 1. Slide wheel assembly onto axle.

Step 2. Slide washer onto axle.


Step 3. Fit straight part of cotter pin through hole on axle.

Step 4. Line up each of the tabs in the hub cap with the slots in the wheel, snap hub cap into place.

Step 5. Fit cover to collet by firmly pressing the cover into place.

Step 6. Push wheel hub cap onto the wheel hub and make sure that the securing lugs correctly locate into mating slots in wheel hub.

Step 7. Repeat for other side.

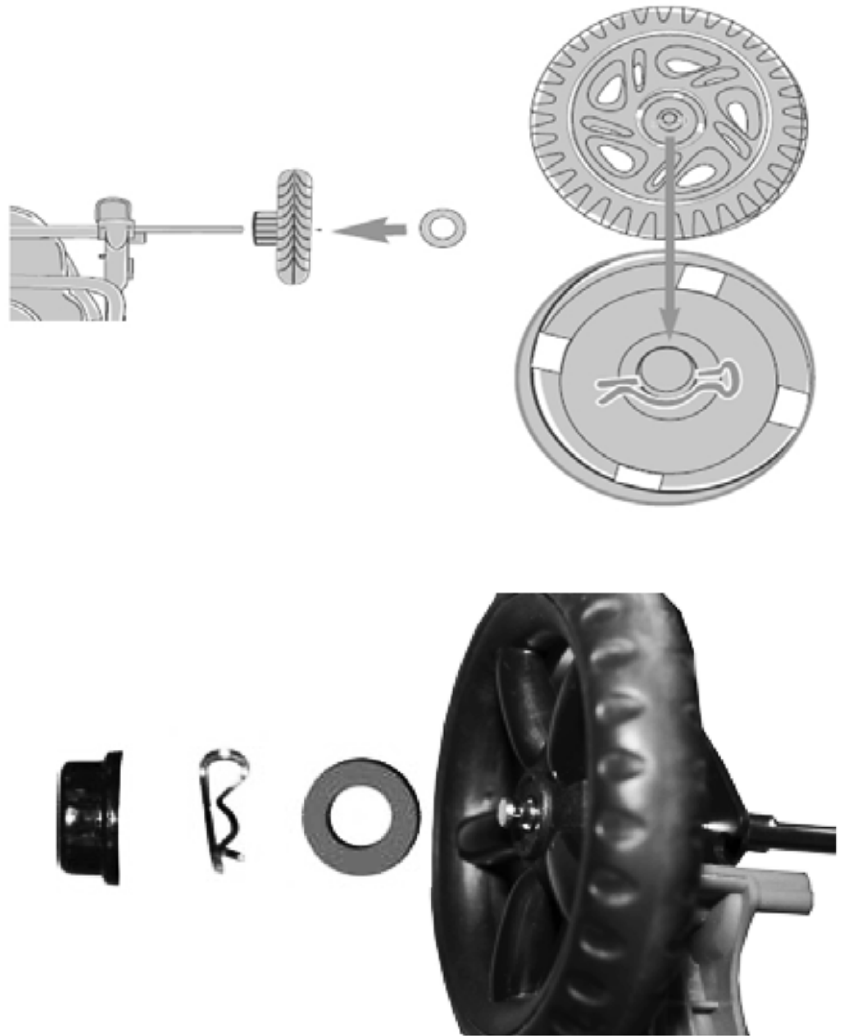


ASSEMBLING REAR AXLE TO FRAME

Step 1. Turn stroller over.

Step 2. Position rear axle assembly as shown.

Step 3. Push rear axle onto frame until it clicks and locks into place on both sides.

NOTE: Pull down firmly on the brackets to be sure they are securely attached to the stroller's rear legs.

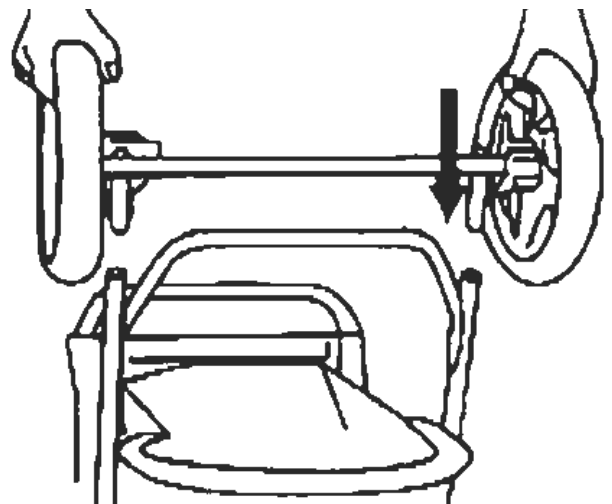

TO ASSEMBLE BACK TRAY

Step 1. To assemble the back tray, first align a hole on one side of the tray with one of the bolts on the handle of the same side of the stroller.

Step 2. Snap one side of the tray over the bolt on the handle then repeat for the other side.



Arrows indicate location of bolts on stroller.

TO USE FRONT WHEEL LOCKING MECHANISM

Step 1. To engage the front wheel locking mechanism so that the front wheel does not swivel, (best when the stroller is used for fast walking or running), pull tab up.

Step 2. To disengage the locking mechanism so that the front wheel swivels (for easy steering) push tab down.



TO LOCK:
Pull tab up.

TO UNLOCK:
Push tab down.

APPLYING THE BRAKES

Step 1. Push levers on both rear wheels down to lock.

Step 2. Pull levers up to unlock.



WARNING: Never leave your stroller parked without applying brakes.



FOLDING STROLLER

Step 1. Before folding the stroller, close the canopy and unzip stroller.

Step 2. Slide second frame lock release (A) to the right, while squeezing the main frame lock release (B) rotate the folding mechanism almost 180 degrees forward until stroller releases and handle is lowered to the rear wheels.

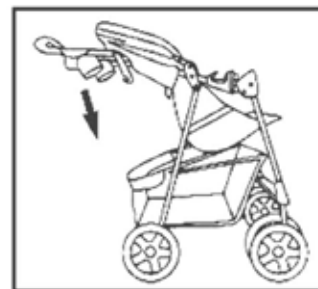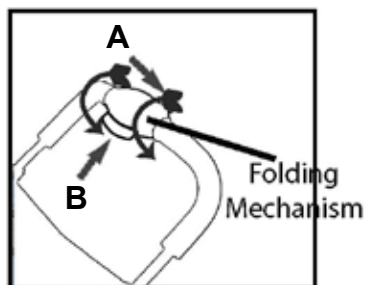

Step 3. When closed, push folding lock onto catch.

LOOKING AFTER YOUR STROLLER

- Always store product in a clean, dry place.
- Not recommended for use on the beach.
- Do not put heavy items on top of the stroller.
- Clean frame by wiping with a lightly oiled cloth.
- Do not use detergent or abrasives. Spot clean fabric with dry cleaning fluid or mild soap and warm water.
- To ensure easy maneuverability and to minimize wear and tear, (especially wheels, axles, and swivels), keep all moving parts clean and lubricated with WD40® or light machine oil.
- NOTE: Do not lubricate brake components or swivel locks.
- Regularly check stroller for loose parts. These should be tightened or replaced.

WHEEL MAINTENANCE

- To clean and lubricate front and rear wheels, push out locking lever under wheel housing to release rear wheel.
- To ensure ease of maneuverability and to minimize wear and tear, keep all moving parts clean and lubricated with WD40® or light machine oil.
- Push wheel sets back on until they click and lock in position; pull on wheel housings to ensure they are secure.
- Push stroller back and forth and rotate swivels around to work in lubricant.
- Clean the rear wheel assembly and the rest of the frame with warm, soapy water; clean off with warm water and dry thoroughly.
- NOTE: Do not lubricate brake components or swivel locks.

REPLACEMENT PARTS

Please have your model number ready before calling. Use only **PET GEAR** replacement parts.



PO Box 99
West Rutland, VT 05777
877-752-9123
www.petgearinc.com